



HOW TO USE THE WINK CHAIR

**WELCOME TO THE WINK EXPERIENCE,
HERE'S HOW TO SIMPLY ADJUST YOUR NEW WINK CHAIR.**



1ST LEVER:

The front lever on your right allows seat depth adjustability. Lift until you reach your desired seat depth and release to set in position.



2ND LEVER:

The middle lever on your right adjusts the seat angle, lift to set in position and then release.



HOW TO USE THE WINK CHAIR



3RD LEVER:

The lever on your left locks and unlocks the reclining function, move backwards to release, move forward to set in position.



HEIGHT ADJUSTABLE ARMREST:

Click to adjust, and then release to set in desired position.